



# Wood Duck Nesting Box (front Loader)

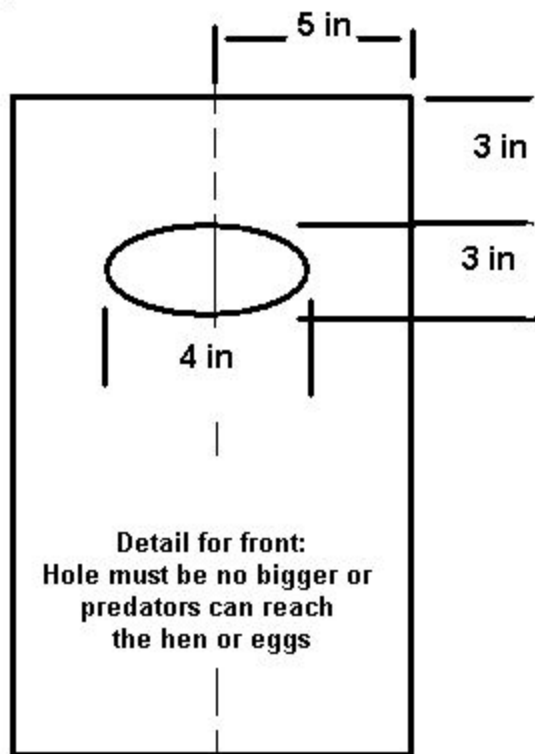

Nail all peices together with galvanized nails or deck screws but save front for last. Measure down from the top 3 inches on both sides and add only one large nail (per side) or screw to create a hinge.

Front must be scored inside or have a mesh so goslings can climb up to the hole.

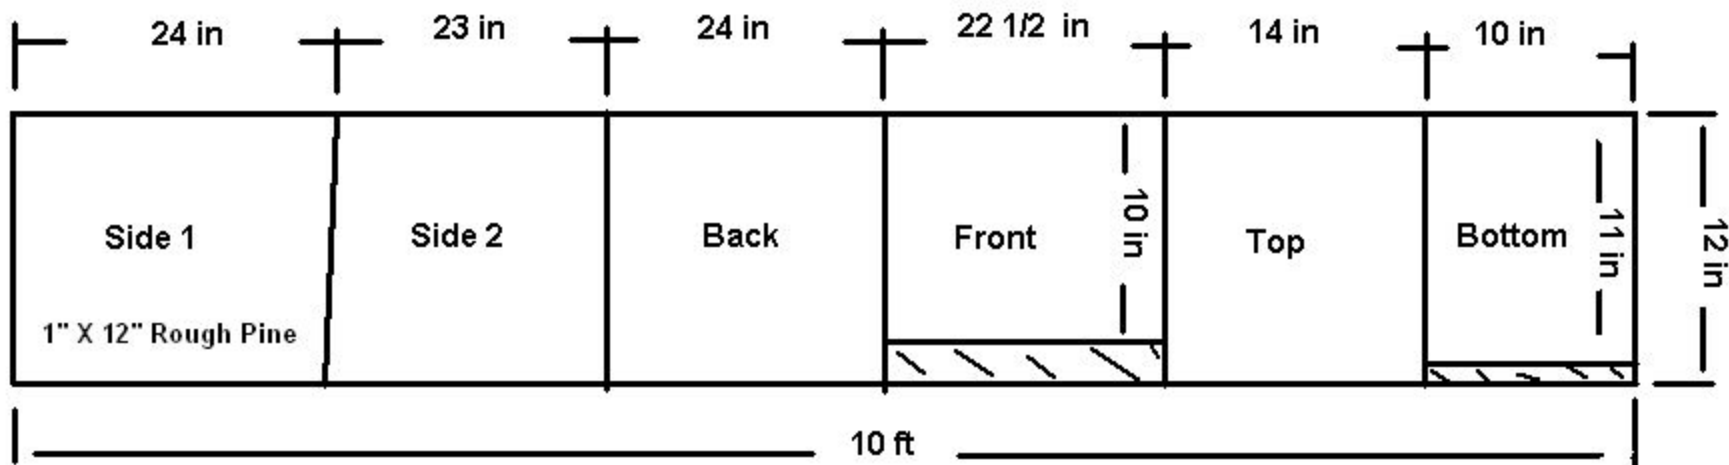

Visit our FOFECA Facebook group to watch the demonstration video